



10.0 H6M Bulb

Disclaimer: We assume you possess the expertise and relevant tools to work on your machine. We also assume you have the OEM/Stock owner's manual or technical service manual for your machine. If you do not possess the skills, knowledge, or tools necessary to perform the installation of electrical and/or aftermarket parts, please see a qualified service provider.



Installation


1. Remove stock bulb from housing.
2. Cut wires to stock bulb and remove from rubber boot.
3. Modify stock boot by cutting off the three nubs from the stock wires run through.
4. Drill a 3/4" hole in the center of the boot.
5. Your boot may look slightly different, but the modifications are the same.



6. Place modified boot over from of bulb and fold back.
7. Place spring in housing



8. Insert bulb into housing. Be sure all three tabs line up before giving a light inward push and a clockwise twist about $\frac{1}{4}$ turn, until seated.

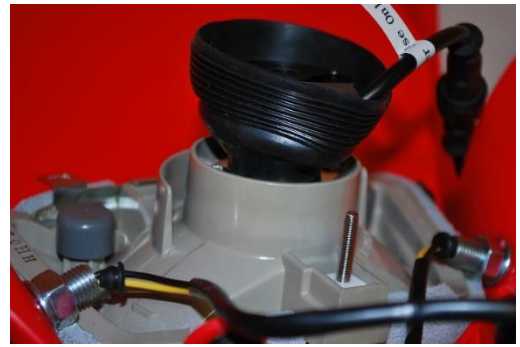

9. Make sure bulb is in proper orientation.
Emitters facing left and right with the shields on the bottom.

