



F800 cap threading instructions

- First unscrew bulb from driver at the barrel connector



Push the barrel connector through cap from inside.



Now push the H7(has the 2 flat terminals) through the cap from the outside.



Reconnect the barrel connector.

