



Tire Pressure Monitoring System

NOTE: Your TPMS has already been through the learning process noted in "TPMS Basic Set Up & Usage"

We recommend this product be used with metal valve stems

1. Install your TPMS monitor.
2. Check your tire pressure with an accurate tire pressure gauge.
3. Turn on Monitor and
 - a. Install Sender marked "A" on the front tire
 - b. Install Sender marked "B" on the rear tire
4. The TPMS will immediately give an air pressure reading.
 - a. If you have two dash marks on your display, go for a quick ride around the block, your monitor should start registering your tire pressure
 - b. If your monitor indicates tire pressure on the front and rear, your system has learned the positions to monitor.
 - c. An alarm may sound. If this occurs, you will need to adjust your High and Low alarm parameters.
5. If your system does not register air pressure after the suggestions above, you will need to refer to the "Learning Process" noted in "TPMS Basic Set Up and Usage"

Thank you for your business and please contact us at 1-800-624-0278 with questions

Cyclops Adventure Sports