



Resistor kit for Tuff Light Turn Signals

Disclaimer: We assume you possess the expertise and relevant tools to work on your machine. We also assume you have the OEM/Stock owner's manual or technical service manual for your machine. If you do not possess the skills, knowledge, or tools necessary to perform the installation of electrical and/or aftermarket parts, please see a qualified service provider.

- Locate the red(front) or yellow(rear) and black wires coming out of the Tuff Light turn signals.
 - Front or rear, whichever is easiest.
 - One resistor is added to the left turn signal light
 - One resistor is added to the right turn signal light
- Using the provided Posi-taps. Connect one wire on the resistor to the black wire on the turn signal. Connect the other wire on the resistor to the red(front) or yellow(rear) wire on the turn signal. Both wires on resistor are now red.

