





## Yamaha YZF Relay Wire Harness

*Disclaimer: We assume you possess the expertise and relevant tools to work on your machine. We also assume you have the OEM/Stock owner's manual or technical service manual for your machine. If you do not possess the skills, knowledge, or tools necessary to perform the installation of electrical and/or aftermarket parts, please see a qualified service provider.*

### Installation

1. Start by removing the seat and fuel tank and locating the battery to make the positive and negative connections on the battery.
2. Then locate the bridge connector. This is located on the left side of the bike just below the battery.
  - a. This plug has a cap and (three brown) wires and (one brown with a Green/Grey) marking.
  - b. Take the switched power (yellow wire) from the relay harness with the silver connector and slide the connector into the bridge plug.
  - c. Listen for a click, this will let you know the connector is properly installed. If not gently remove the wire and rotate the connector 180 degrees and try it again.
  - d. The switched power source is on an approximate 1 minute time delay when timed out the light or other accessories will turn off.

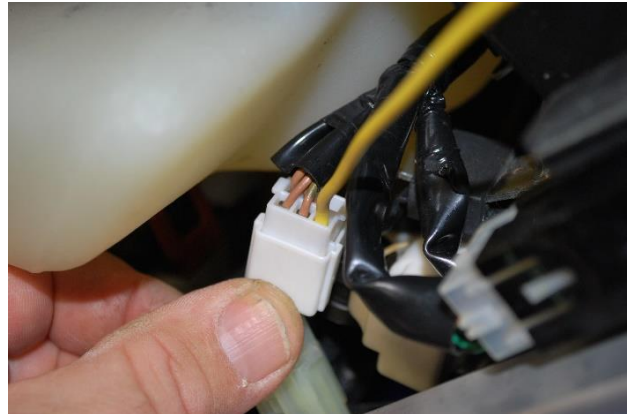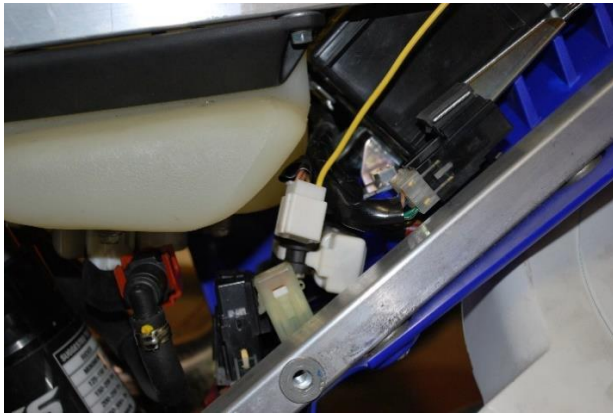

3. Run power output wire under the fuel tank to a suitable location for the lighting you are installing.
4. Reinstall the fuel tank and test the light.
5. Reassemble your motorcycle.
  - a. Avoid pinch points around triple clamp, seat, and fuel tank.

