

690 Light Mounting Bracket


2008-2018 KTM

Disclaimer: We assume you possess the expertise and relevant tools to work on your machine. We also assume you have the OEM/Stock owner's manual or technical service manual for your machine. If you do not possess the skills, knowledge, or tools necessary to perform the installation of electrical and/or aftermarket parts, please see a qualified service provider.



Installation

1. Remove the four bolts under the fender. Place the new light mount on top of the fender and loosely reinstall the four fender bolts.

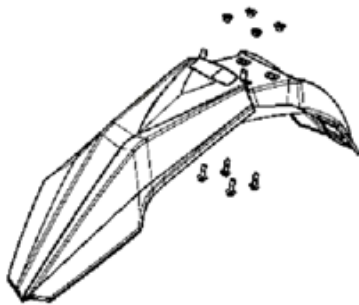

2. Remove the bottom pinch bolts on both sides of the lower triple and install the support bracket as shown in the picture above.
3. Install Long Range Optimus by inserting the mounting bolts through the main light mount and the stabilizer bracket. Snug the nut on the light bracket bolt.
4. Once the light bracket stabilizer brackets are all mounted loosely, tighten the Long-Range Optimus/Pegasus/Auroras mounting nut, then snug up the four fender bolts followed by the two pinch bolts.
5. Your lights are now mounted. Please ensure that you properly torque all hardware/bolts/nuts/screws in accordance with the manufacturer's specifications.
6. Refer to the light wiring diagram for electrical installation instructions.



Suggestions for placement of wire components for the Auxiliary Lights



If you're using the Skene Dimmer option, there is a great placement spot shown above and to the right.

Posi-Tap™
TAP CONNECTOR

- TAPS WIRES WITHOUT CUTTING
- TOTAL WIRE INTEGRITY IS MAINTAINED
- INSTALLS IN SECONDS BY HAND
- NO CRIMPING OR TOOLS REQUIRED
- REUSABLE OR PERMANENT
- LESS RESISTANCE
- VIBRATION PROOF
- FULLY INSULATED

POWERS UP TO (4) LEADS AT ONCE!

QUICK & EASY

- 1 Insert Hot Wire
- 2 Tighten
- 3 Strip Leads
- 4 Insert & Tighten

NO CRIMPING

NO TOOLS NEEDED

