




## 2008-2018 KTM 690 Light Mounting Bracket

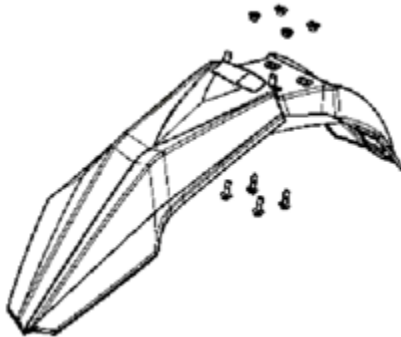

- Remove the four bolts under the fender. Place the new light mount on top of the fender and loosely reinstall the four fender bolts.



- Remove the bottom pinch bolts on both sides of the lower triple and install the support bracket as shown in picture above.



- Install Long Range Optimus by inserting the mounting bolt through the main light mount and the stabilizer bracket. Snug the nut on the light bracket bolt.
- Once the light bracket stabilizer brackets are all mounted loosely, tighten the Long-Range Optimus/Pegasus/Auroras mounting nut, then snug up the four fender bolts followed by the two pinch bolts.
- Your lights are now mounted. Please ensure that you properly torque all hardware/bolts/nuts/screws in accordance with the manufacturer's specifications.
- Refer to the light wiring diagram for electrical installation instructions.

### Suggestions for placement of wire components for the Auxiliary Lights



If you are using the Skene Dimmer option, there is a great placement spot shown above and to the right

**Posi-tap Instructions:** black end = remove black cap and place over wire you wish to tap. Insert black cap back into red Posi-tap body and tighten snugly. No wire stripping is needed



Thank you for your business and please contact us at 1-800-624-0278 with questions

Cyclops Adventure Sports