



## 9007 LED Headlight Bulb Installation instructions

1. Unplug original bulb
2. Remove old bulb from housing by counterclockwise twist of the plastic collar attached to housing.




- a. Make note of the orientation of the collar and its fingers for reinstallation.
3. Disassemble your new cyclops 9007; remove the rubber O-ring, remove the 2 small screws in the plastic bulb base, slide the bulb base off the bulb housing.



4. Slide the base off the bulb (note orientation), install Ford headlight bulb retainer over bulb housing, then slide the bulb base back over the bulb housing.
  - a. The ford bulb retainer is now sandwiched between the 9007 fan housing and the 9007 bulb base.
5. Install bulb base as orientated originally, install screws and O-ring
6. Install bulb into housing and lock collar onto housing, plug in bulb



7. Check emitters are facing left and right once inserted into light housing.

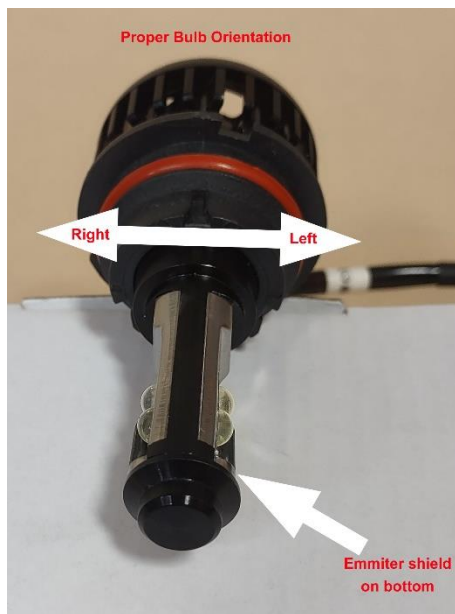

8. Enjoy your new lights