




KTM/Husqvarna Relay Wire Harness 2014-2022

1. Remove the seat and fuel tank and
2. Connect the power to the relayed harness
 - a. Attach the red wire ring terminal (with fuse) to the positive terminal on the battery
 - b. Attach the black wire ring terminal to the negative terminal on the battery.
3. Attach the switched power plug plu to the stock/OEM service port connector.
 - a. Locate the 6-pin connector near the ECU.
 - b. This connector will typically have a shorting plug already installed on the bike. Remove the cover from the plug and install the Cyclops switched power plug on your cyclops relayed harness.

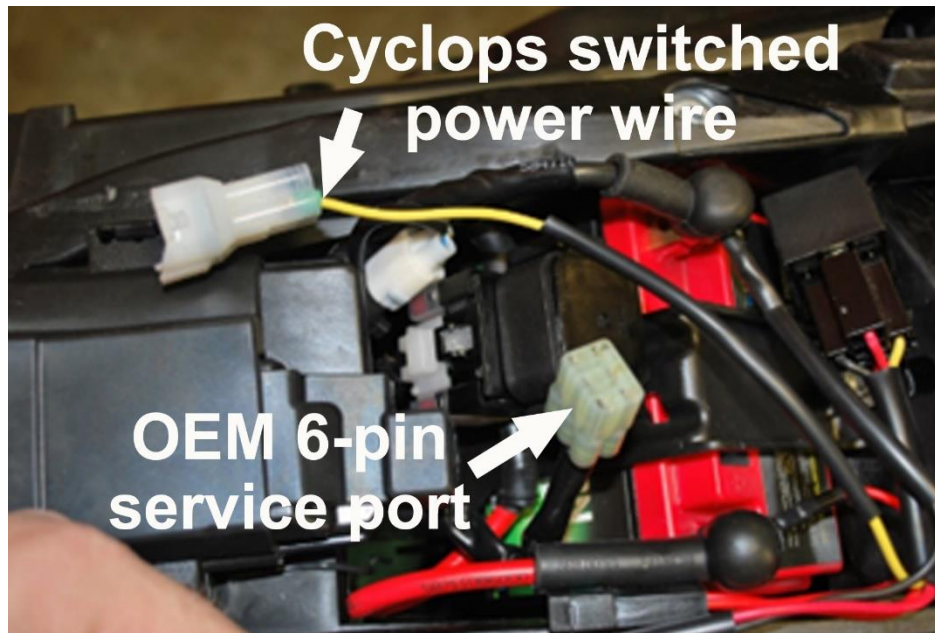

NOTE: Depending upon the make, model, and year of your bike, the electrical connector may look different than the one in the above photo. The Cyclops connector will ALWAYS be plug and play to your specific make, model, and year bike.


Please call if you feel the harness is incorrect.

Refunds and exchanges will not be provided on harnesses that have been modified outside of the factory

4. Run the light-power output wire under the fuel tank and out to a suitable location for the lighting you are installing.
 - a. Secure with zip ties and avoid pinch points
5. Reinstall the fuel tank and test the light
6. Reassemble your motorcycle



Posi-tap Instructions: black end = remove black cap and place over wire you wish to tap. Insert black cap back into red Posi-tap body and tighten snugly. No wire stripping is needed

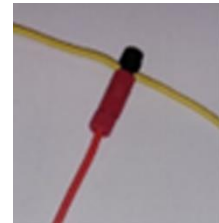

a	Cyclops Relay	Qty 1
b	Accessory Power Port	Qty 2
c	Negative battery ring terminal	Qty 1
d	Positive battery ring terminal	Qty 1
e	Switched Power Plug	Qty 1
f	3M Dual Lock sticky tape	Qty 1
g	EXTRA accessory bullet connectors	Qty6

