



## Fork Saver Mounts


*Disclaimer: We assume you possess the expertise and relevant tools to work on your machine. We also assume you have the OEM/Stock owner's manual or technical service manual for your machine. If you do not possess the skills, knowledge, or tools necessary to perform the installation of electrical and/or aftermarket parts, please see a qualified service provider.*

### Installation

1. Determine the mounting location of your lights. Ensure that lights won't hit body work at full steering lock.
  - a. If you have a low fender, make sure the lights won't be contacted under full compression of the front suspension.
2. Assemble the Fork Saver Mounts in the following sequence.
  - a. M6 bolt from cyclops light bracket, rubber washer, fork mount, steel washer, nylon locknut



3. Place rubber washer between light base and fork mount

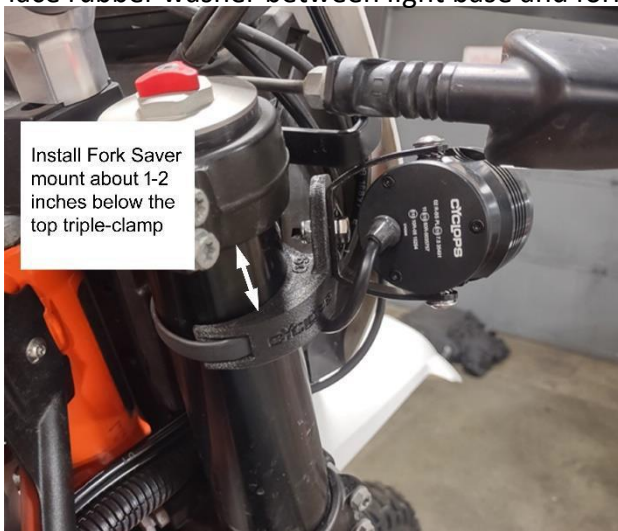


4. Once the mounting location is determined, cut the heat-shrink tubing to length, and then heat the heat shrink tubing around the clamp, this prevents the metal portion of the clamp from contacting the metal fork tube.



5. DO NOT OVER TIGHTEN. Just tight enough so the lights don't move under normal riding but will move in the event the lights contact anything



We recommend assembling in this order

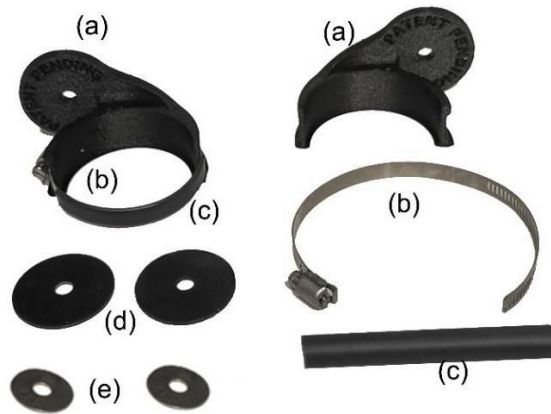

**Kit contents**

a	Cyclops Fork Mount Bracket	Qty 2
b	hose clamp	Qty 2
c	heat-shrink tubing	Qty 2
d	Rubber washer	Qty 2
e	steel washers	Qty 2