



## Honda Relay Wire Harness

*Disclaimer: We assume you possess the expertise and relevant tools to work on your machine. We also assume you have the OEM/Stock owner's manual or technical service manual for your machine. If you do not possess the skills, knowledge, or tools necessary to perform the installation of electrical and/or aftermarket parts, please see a qualified service provider.*


### Installation

1. Start by removing the seat and locating the battery to make the positive and negative connections on the battery.
2. Remove left side panel and air box cover.
3. Locate the Four-pin **RED** electrical connector located behind the radiator on the left-hand side.
  - a. The red electrical connector is the factory service port for your bike. We will be using the power wire in this port with a white Cyclops electrical connector.
  - b. Run your trigger wire (yellow wire with white plug) out of the air box up between the throttle body and black connector to the red plug. Remove **RED** cover from the factory plug and connect the Cyclops white 4-pin plug into the factory red plug.



4. Connect accessory (lights, grips, etc.) to relay harness,
5. Start bike and check that all accessories are working properly.
6. Secure wires with zip-ties as needed, make sure the wires are secured and routed in such a manner as to avoid pinch points.



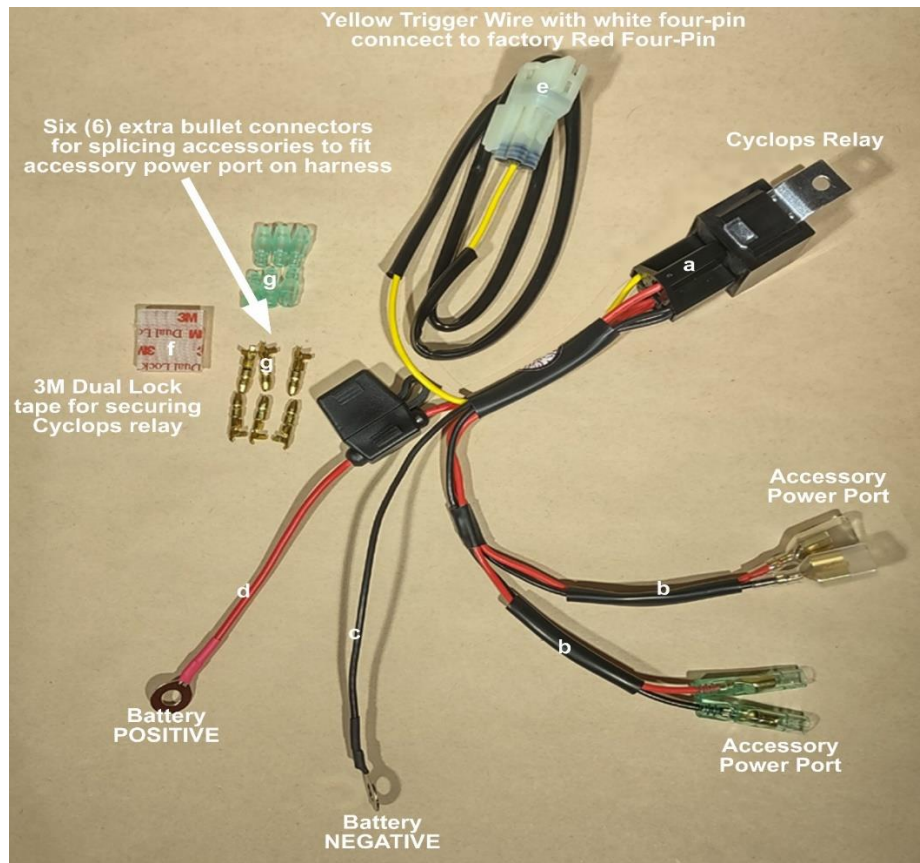

A	Cyclops Relay	Qty 1	E	Yellow Trigger Wire 4-Pin	Qty 1
B	Accessory Power Port	Qty 2	F	3M Dual Lock Tape	Qty 1
C	Battery Negative	Qty 1	G	Extra Bullet Connectors	Qty 6
D	Battery Positive/Fuse	Qty 1			