



Cyclops 1190 Auxiliary Light Mount


Disclaimer: We assume you possess the expertise and relevant tools to work on your machine. We also assume you have the OEM/Stock owner's manual or technical service manual for your machine. If you do not possess the skills, knowledge, or tools necessary to perform the installation of electrical and/or aftermarket parts, please see a qualified service provider.

Installation

1. Look under the front headlight cowl, locate and remove these 6 M5 bolts.
2. Install the right and left side brackets.
 - a. Use M5x30 Bolts (leave loose)
 - b. Use G & F spacers.
 - c. Use Blue Threadlocker.
3. Use the front and rear mounting holes to hold bracket in place, then install the center cross brace.
4. Install center cross brace.
 - a. Use M5x35 bolts.
 - b. Use Blue Threadlocker.
5. Braces should look like picture to the right
6. Mount your lights.



Kit Contents

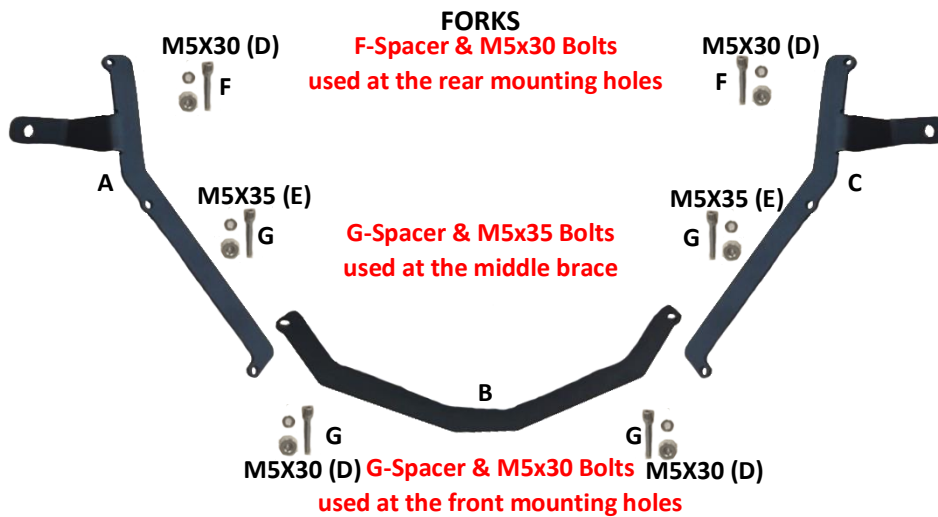

A	Right Side Bracket	Qty 1	E	M5x35 Bolts	Qty 2
B	Center Brace	Qty 1	F	9.5mm Spacer	Qty 2
C	Left Side Bracket	Qty 1	G	9mm Spacer	Qty 4
D	M5x30 Bolts	Qty 4	H	M5 Washers	Qty 6

