


KTM/Husqvarna Relay Wire Harness 2014-22

Disclaimer: We assume you possess the expertise and relevant tools to work on your machine. We also assume you have the OEM/Stock owner's manual or technical service manual for your machine. If you do not possess the skills, knowledge, or tools necessary to perform the installation of electrical and/or aftermarket parts, please see a qualified service provider.

Installation

1. Remove the seat and fuel tank
2. Connect the power to the relayed harness
 - a. Attach the red wire ring terminal (with fuse) to the positive terminal on the battery
 - b. Attach the black wire ring terminal to the negative terminal on the battery.
3. Attach the switched power plug to the stock/OEM service port connector.
 - a. Locate the 6-pin connector near the ECU.
 - b. This connector will typically have a shorting plug already installed on the bike. Remove the cover from the plug and install the Cyclops switched power plug on your cyclops relayed harness.

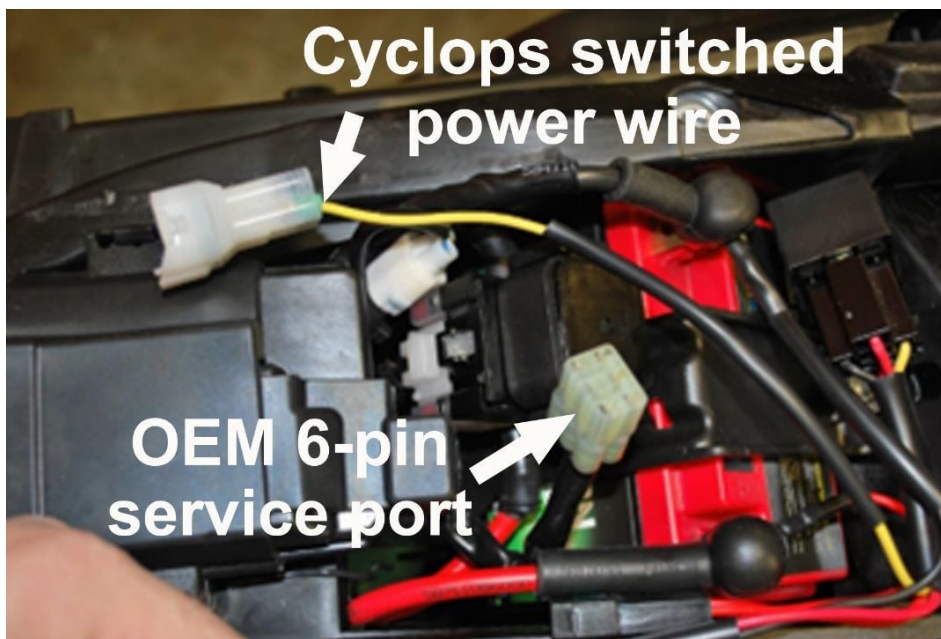

NOTE: Depending upon the make, model, and year of your bike, the electrical connector may look different than the one in the above photo. The Cyclops connector will ALWAYS be plug and play to your specific make, model, and year bike.

4. Run the light-power output wire under the fuel tank and out to a suitable location for the lighting you are installing.
 - a. Secure with zip ties and avoid pinch points
5. Reinstall the fuel tank and test the light
6. Reassemble the motorcycle



a	Cyclops Relay	Qty 1
b	Accessory Power Port	Qty 2
c	Negative battery ring terminal	Qty 1
d	Positive battery ring terminal	Qty 1
e	Switched Power Plug	Qty 1
f	3M Dual Lock sticky tape	Qty 1
g	EXTRA accessory bullet connectors	Qty6

