




## Husqvarna 701 Headlight Replacement

*Disclaimer: We assume you possess the expertise and relevant tools to work on your machine. We also assume you have the OEM/Stock owner's manual or technical service manual for your machine. If you do not possess the skills, knowledge, or tools necessary to perform the installation of electrical and/or aftermarket parts, please see a qualified service provider.*



### Installation


1. Remove the headlight mounting screws (blue arrow above) on both sides of the headlight mask, the headlight can now be removed from the motorcycle.
2. Unplug and remove the stock halogen bulb assembly and set aside.
3. The parking light bulb is no longer needed, cut the wires, and reinstall the bulb into your headlight reflector to serve as a housing plug to protect from the environment. Alternatively, you can source a plug at the local hardware store.
4. Disassemble your Cyclops H4 bulb by removing the base from the bulb housing.
  - a. Separate the bulb from Cyclops backing plate and H4 metal base with foam dust seal by holding the bulb fan in one hand and pinching the base in other. Give a gentle push and turn counterclockwise until keyway's align and the base separates from the bulb housing.
5. Remove the cyclops backing plate from the H4 bulb housing.
6. Install the Cyclops H4 base with foam dust seal on top of ramps on headlight housing.

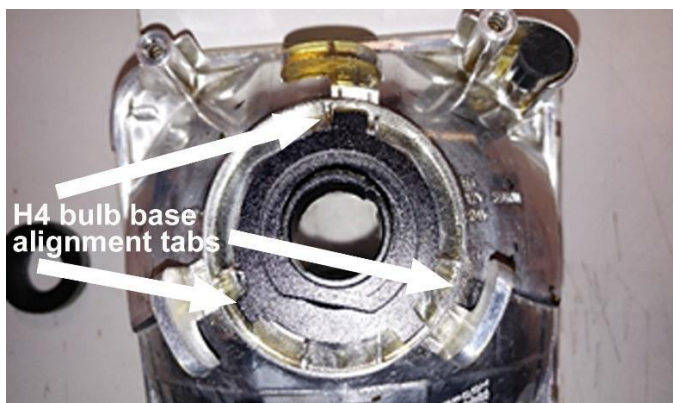


- a. Ensure the metal side of the base is down and the rubber side facing you.




7. Confirm the supplied O-ring is in the Cyclops backing plate.
8. Install the Cyclops backing plate with supplied O-ring.
  - a. Ensure the metal H4 base with foam dust seal stays on the bulb alignment ramps during this process.

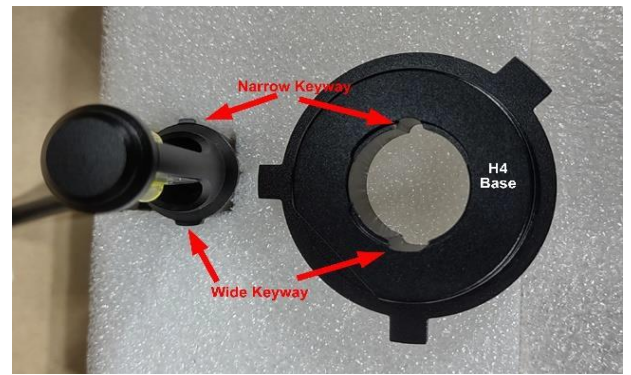

9. Install bulb into metal H4 base with foam dust seal. Make sure to align the narrow and wide keyways. Give slight inward pressure and clockwise twist.
  - a. Ensure emitters are facing left and right, not up and down.
10. Once you have the bulb installed into the headlight reflector you can plug your headlight wire adapter and headlight plug into your motorcycle wire harness.
11. Tuck the wires aside and secure, re-install your headlight housing onto the motorcycle.
12. Ensure emitters are facing left and right with upper portion of the LED exposed and aim your headlight.
  - a. Loosen the torx screw, adjust and retighten.

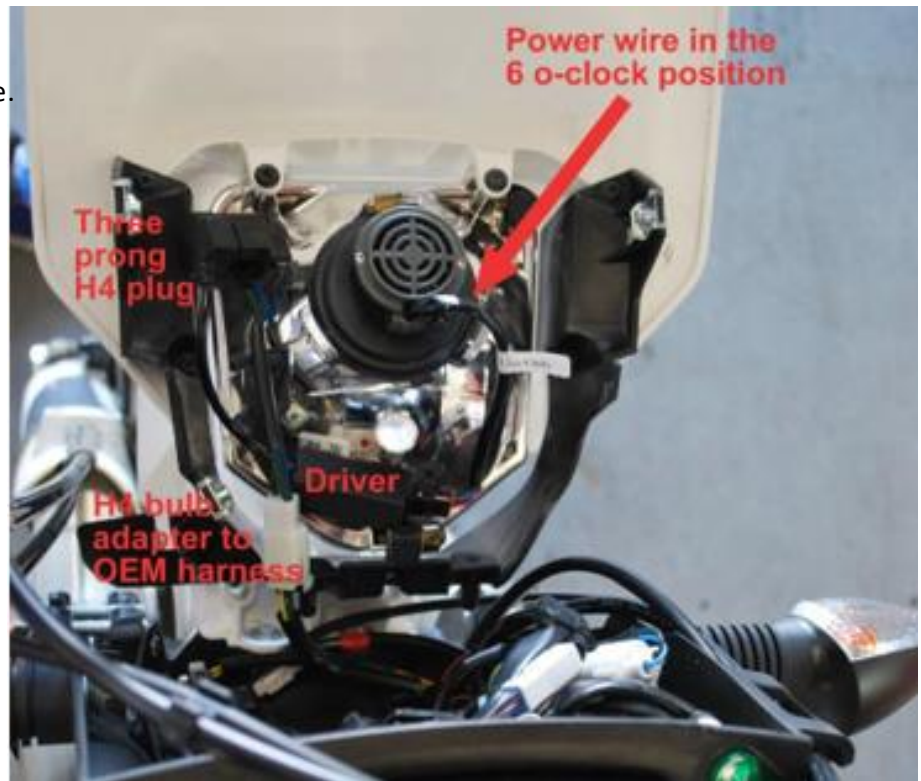

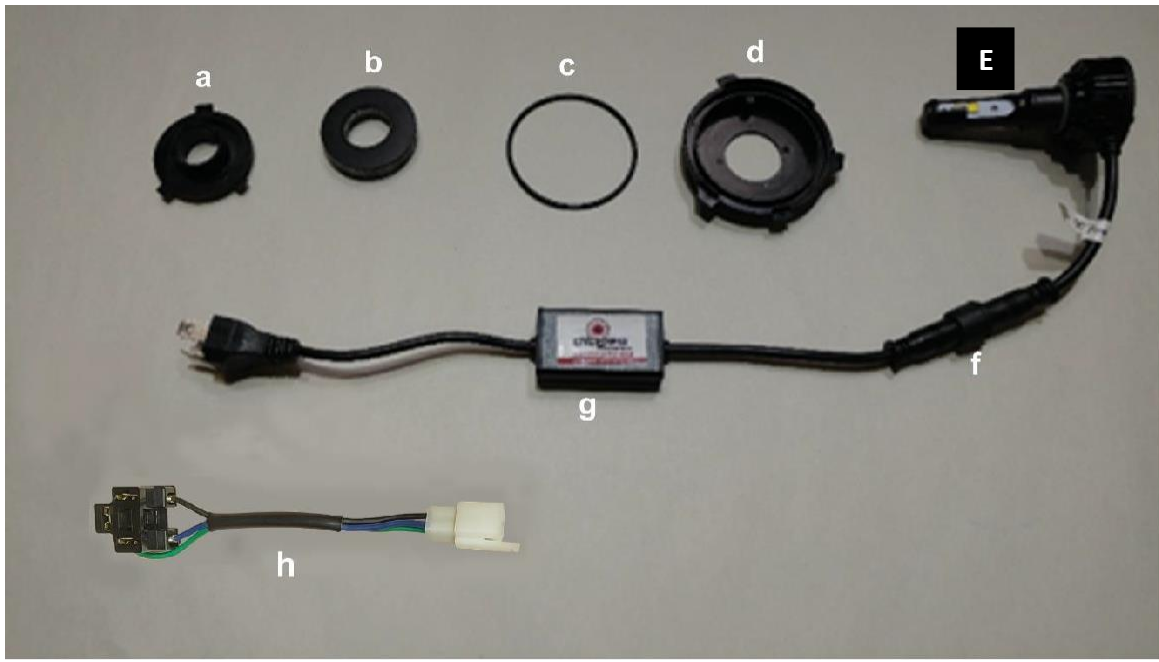

A	Metal H4 bulb base	Qty 1		F	Driver-bulb 5 pin connector	Qty 1
B	Foam dust seal	Qty 1		G	Cyclops lightbulb driver	Qty 1
C	Rubber O-ring	Qty 1		H	H4 bulb adaptor to stock plug	Qty 1
D	Cyclops backing plate	Qty 1				
E	H4 LED bulb	Qty 1				